


# JUSTUS


## Kurzanleitung / Quick start Guide / Guide rapide

Heizen mit Holz / Heating with wood / Chauffer au bois


### 1. Automatikregler Brennstoff Holz Automatic regulator / Régulateur automatique

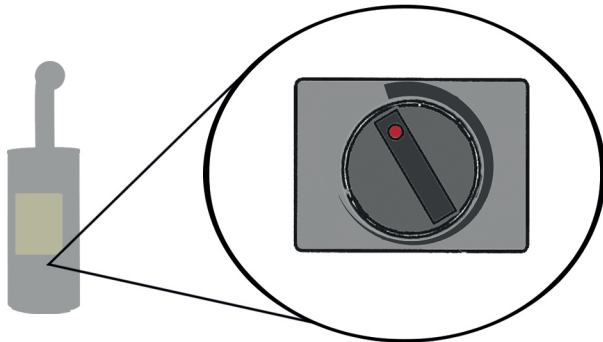


### 2. Sekundärluftregler Start Secondary air control / Régulateur d'air secondaire

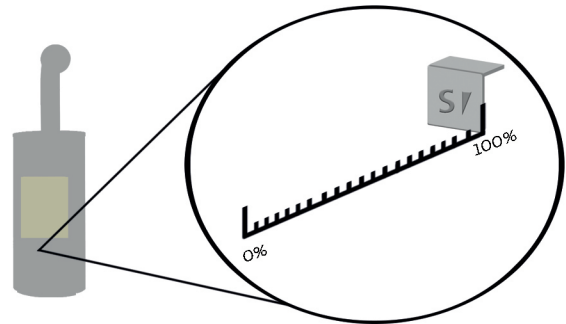

### 3. Holz Wood / Bois

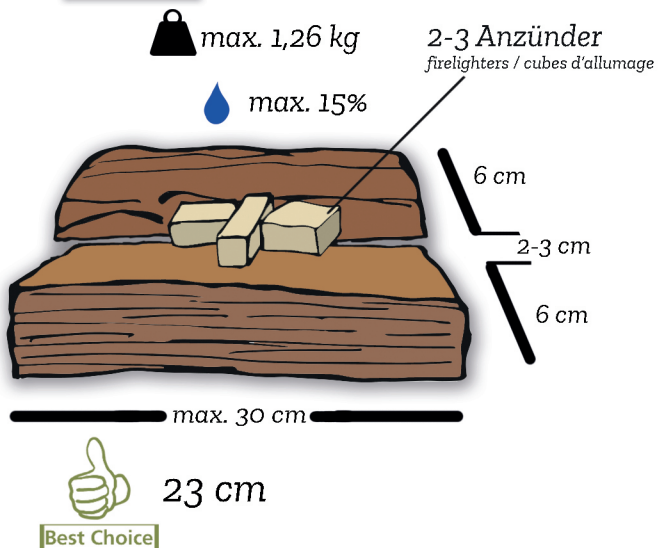


### 4. Stapeln + anzünden Stacking + lighting / Empiler + allumer

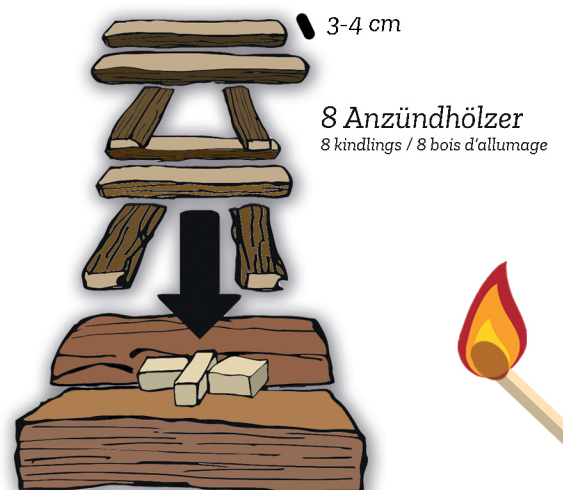

### 5. Holz nachlegen Stoke fire with wood / recharger le bois



Keine Flammen  
no flames / pas de flamme

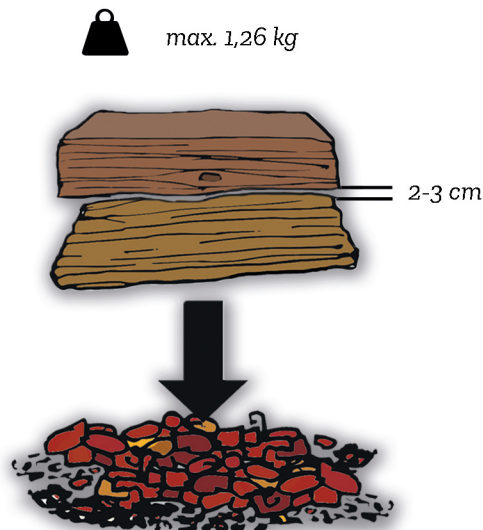


# JUSTUS


## Kurzanleitung / Quick start Guide / Guide rapide

Heizen mit Holz / Heating with wood / Chauffer au bois

### 7. Sekundärluft einstellen Secondary air control / Ajuster l'air secondaire

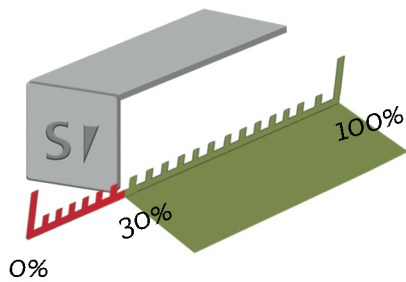


### 8. Beenden End / Terminer

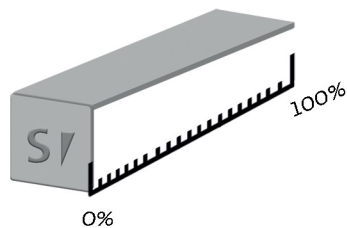

### 9. Reinigung Cleaning / Nettoyage



1x / Tag  
day  
jour

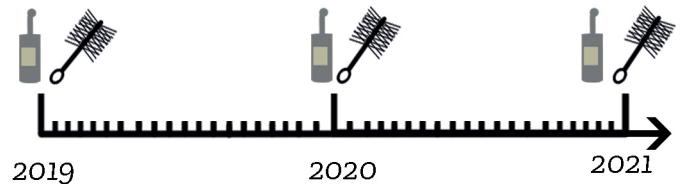

5697 Frisco 2.0 2932366000



[www.Justus.de](http://www.Justus.de)



Videoanleitung